

TOPTEC FLOORS

TOPTECFLOORS.COM

TOPTEC®
Coat in the Concrete


Working Instructions

1



PLACE THE LINERS.

2

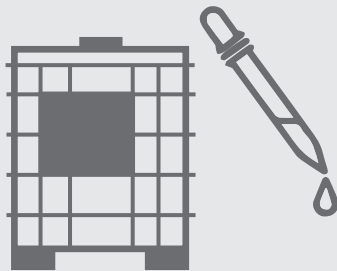

ADD TOPTEC® AT THE BATCHING PLANT WITH THE TEMPERING WATER TO THE CONCRETE MIXTURE OR TO READY MIXED CONCRETE BATCH AT SITE.

3




MIX FOR ABOUT THREE MINUTES.

4



POUR THE CONCRETE (WITH OR WITHOUT A PUMP).

5

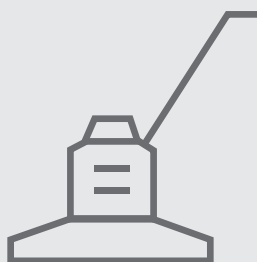

IN ORDER TO SMOOTH THE SURFACE, TROWEL WITH A MECHANICAL TROWEL (HELICOPTER) OR OTHER. CURE FOR THREE DAYS AND CUT WITHIN 48 HOURS.